

HSDOLLY Installation instructions:

1. Tip machine forward on its nose.
2. Push dolly underneath until pins contact chassis. Make sure chassis is between side rails on dolly.
3. Hold dolly in place with one foot while pulling machine back on dolly.
4. Pull out on spring pin so it clears the D-ring on back of machine (note- make sure castor is turned to clear axle).
5. Be sure spring pin latches in (see picture).
6. The dolly is ready to use.
7. To remove the dolly, tip machine forward & unlatch spring pin, roll dolly out.

Note: the hooks on the front of the dolly may make it difficult to install the first few times, until they are bent to fit the machine.

