



Clarke FM Buffer

Clarke® Floor Maintainer Wiring Diagram - 120V 50-60 Hz FM 1500HD, FM 1700HD, FM 2000 4/01

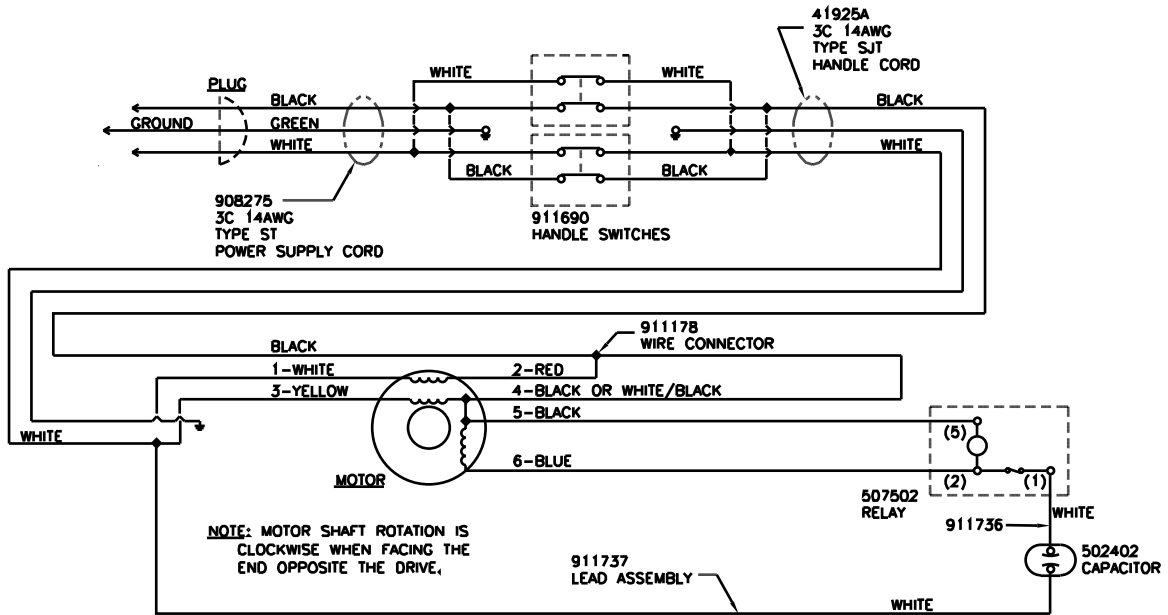


Caution: Do not bend the push-on male terminal tabs on the swit

Clarke® Floor Maintainer Wiring Diagram - 230V 50-60 Hz FM 1500HD, FM 1700HD, FM 2000 4/01

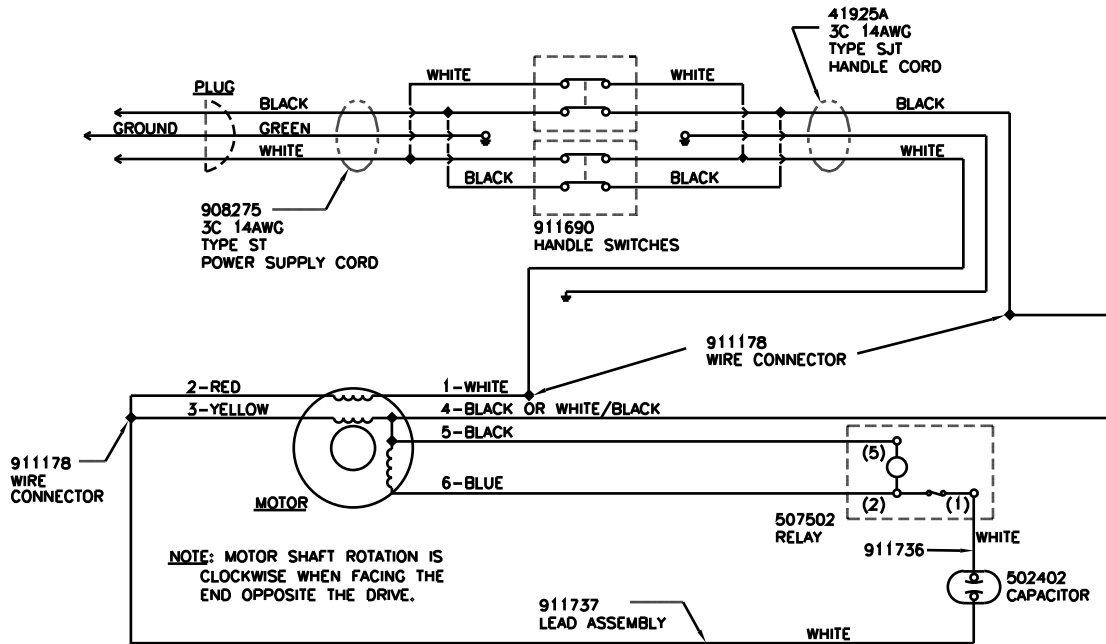


WARNING: Repairs by qualified personnel only.
AVERTISSEMENT: Reparations par personnel specialise seulement.
ADVERTENCIA: Unicamente personal calificado deberian hacer reparaciones.

**Clarke® Floor Maintainer
Wiring Diagram - 120V 50-60 Hz
FM 2300 4/01**

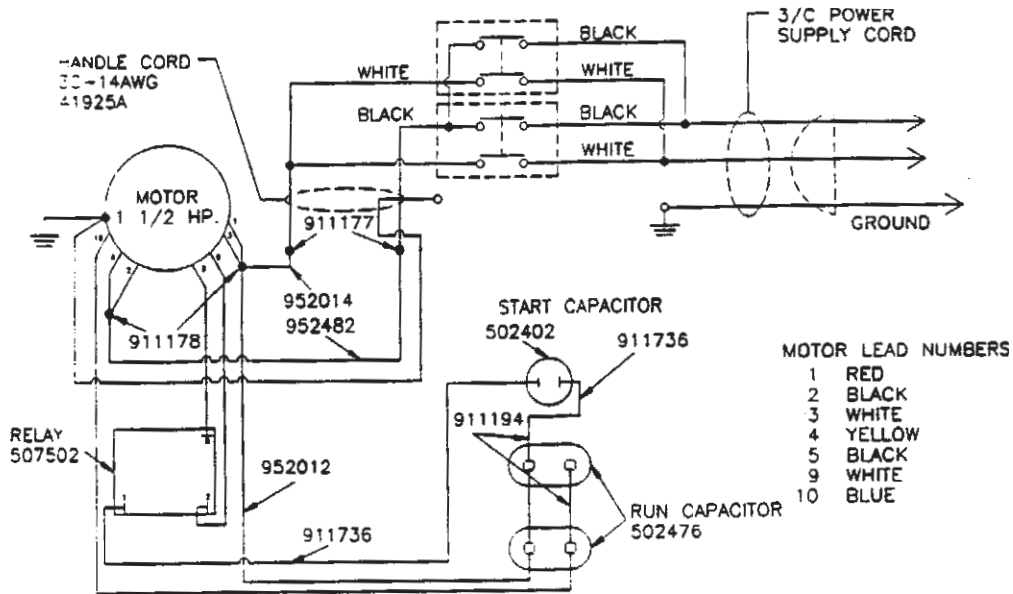

Caution: Do not bend the push-on male terminal tabs on the switch.

**Clarke® Floor Maintainer
Wiring Diagram - 230V 50-60 Hz
FM 2300 4/01**

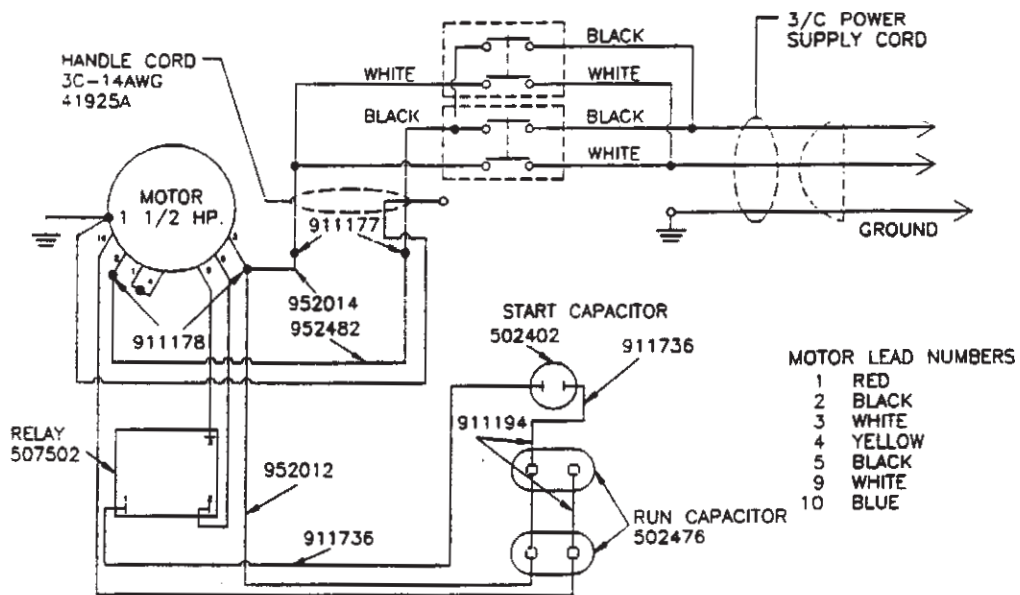

WARNING: Repairs by qualified personnel only.
AVERTISSEMENT: Reparations par personnel specialise seulement.
ADVERTENCIA: Unicamente personal calificado deberian hacer reparaciones.