

## KTDOLLY Installation instructions:

1. Tip machine forward on its nose.
2. Push dolly underneath until hooks contact wheel truck. Make sure pins are in front of wheel cutout (Photo 1).
3. Pull up on back of dolly until it is in position. Make sure rear wheel is between guide fork.
4. Be sure spring pin latches in. If spring pin does not latch, you may need to bend spring pin arm until it does (see Photo 2).
5. Tip the machine back down onto dolly. The dolly is ready to use.
6. To remove the dolly, tip machine forward & unlatch spring pin, roll dolly out.



**Photo 1**



**Photo 2**