

MNE07 & MNE08 Nose Replacement

1. Remove the 2 bolts holding the nose to the wheel bracket (photo 1).
2. Remove the nose assembly from the motor (photo 2).
3. Place the new nose on the motor assembly, making sure the belt is around the pulley (photo 3).
4. Install the bolts through the wheel bracket into the nuts in the new nose assembly. Leave loose.
5. Holding the nose assembly in your hand, use your thumb to push on the wheel bracket and tighten the belt (photo 4).
6. Look through the pipe and confirm the belt is around the pulley (photo 5).
7. Tighten the bolts. Do not over tighten!
8. Using the 5/32 hex key to hold the spindle, remove the pad from your old nose.
9. Remove the shroud from the old nose, and install it on the new nose.
10. Install the pad on the new nose.

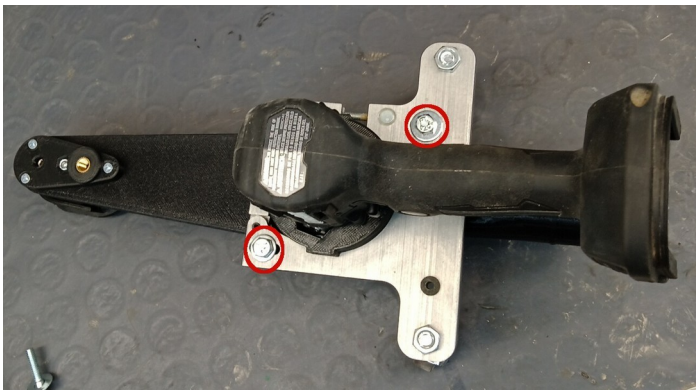


Photo 1

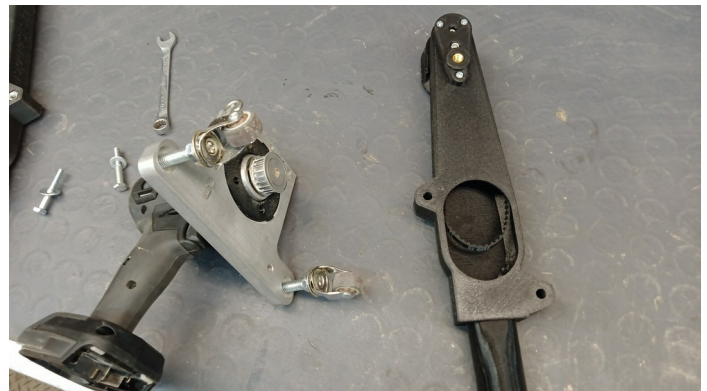


Photo 2



Photo 3



Photo 4

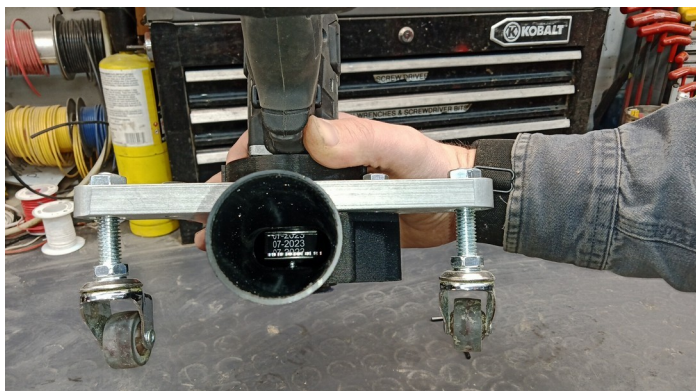


Photo 5