




"T" Handle Replacement Guide

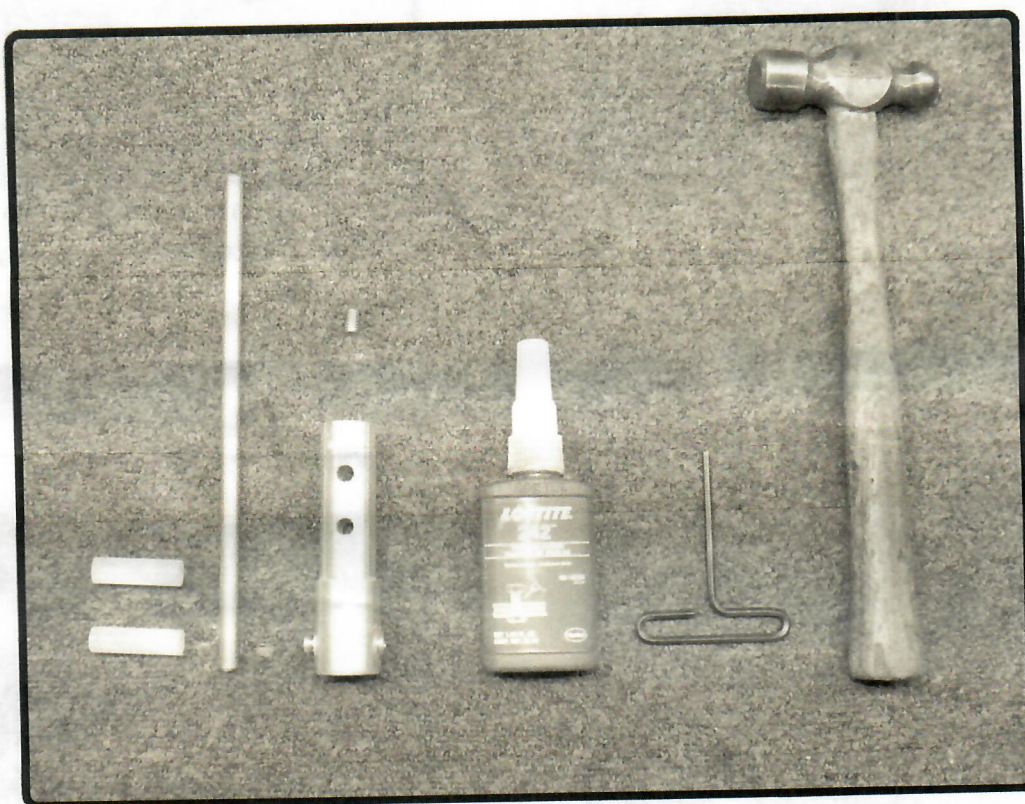

☐ Long screwdriver/Nut driver


☐ Hammer

☐ Loctite 242

☐ 3/16ths Allen key

Estimated time - 8 minute
replacement

Remove set screw to allow the axle to come out of position

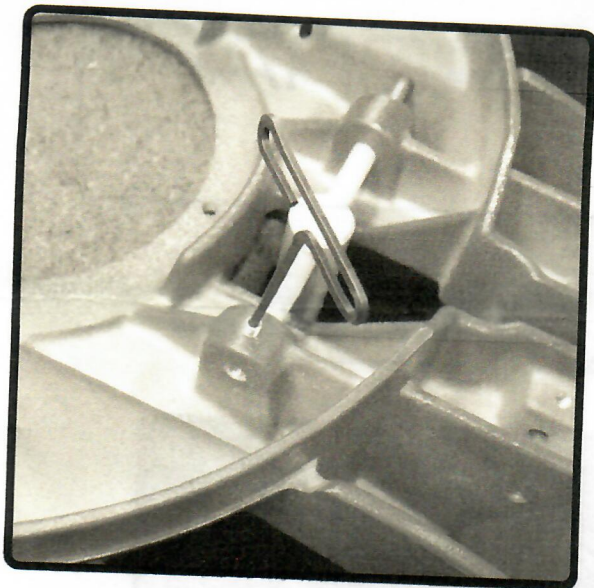


Use a long thin screwdriver and tap with a hammer to slide the axle out of the first nylon spacer. Do not fully remove the axle



Remove the nylon spacer to allow the "T" handle to be removed



Add the nylon spacer back into position, and tap the axle to pass through the reinforced tube in the center and through the nylon spacer

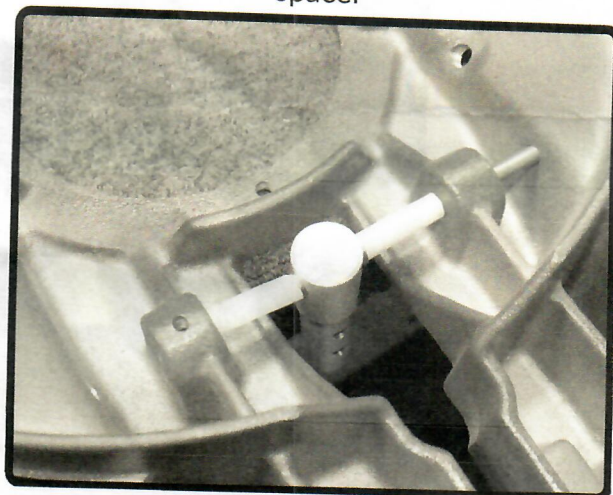

Use a drop of Loctite 242 to the set screw, and tighten the screw until completely tightened

