




Instructions for the Replacement of the Reinforced Tubing

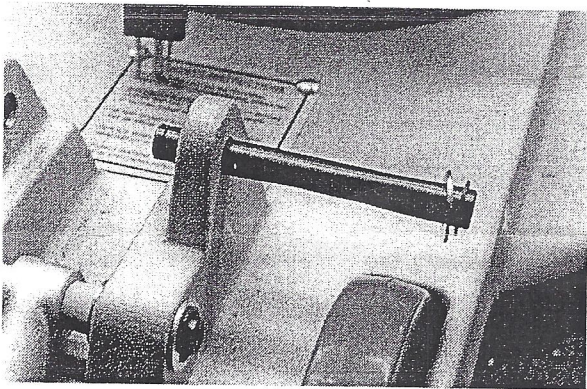


1) Remove the existing Handle (T) from the machine.

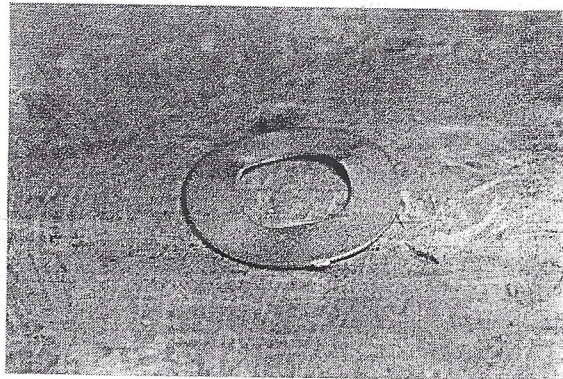


2) Take the wave washer and hammer it flat.

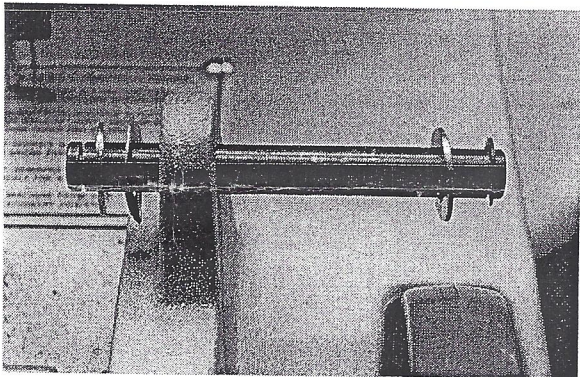


3) Insert the axle from one end of the apron and add 2 washers.

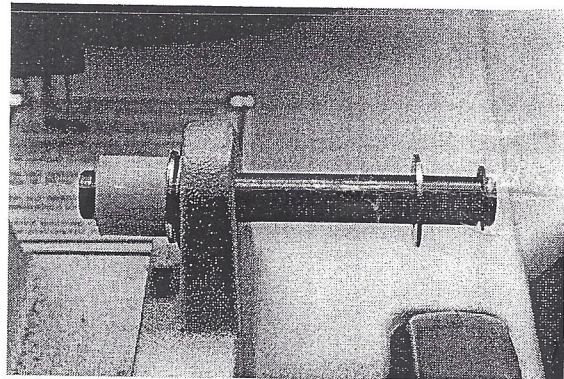


4) Now add the nylon spacer. Then insert the reinforced tube in the center.

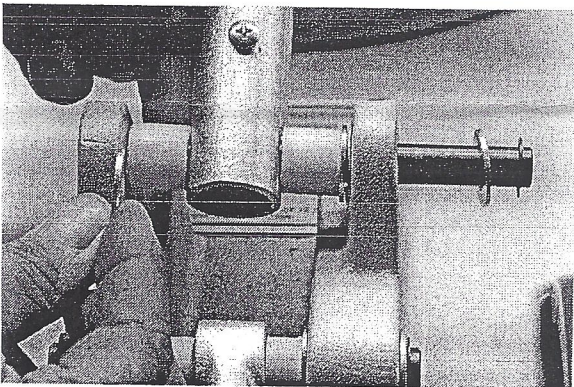

5) Add another nylon spacer on the other side of the reinforced tube. Then add the flattened wave washer.

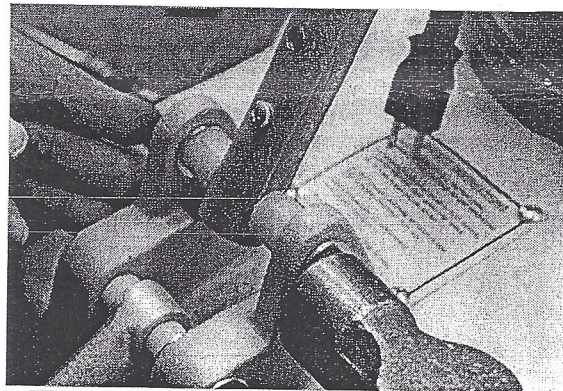

6) Hammer in the axle.

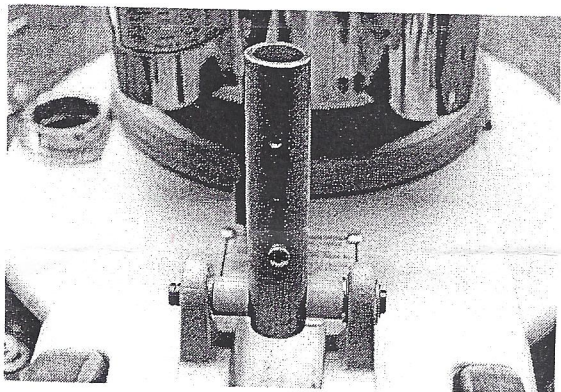

7) Final assembly.